

Free Standing Display Installing Instruction - for 1.5 mm cable display & shelving system

Free Standing Display -1.5 mm cable display




1. Use the screws to fix the built-in fitting on the foot .
2. Put the 2 m aluminium bar on the foot .
3. Lock the cross bar on the 2 m bar .
4. Put the CF6-01 into the upside cross bar .




- 5-6 .Put the CF6-02 into the lowside cross bar .
- 7-8 .Use the CVS and CVD to fix the acrylic poster holder on the cable .

Free standing Shelving System

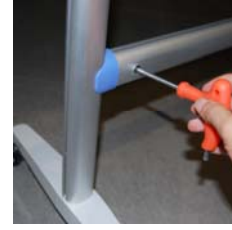

1. Use the screws to fix the built-in fitting on the foot .
2. Put the 2 m aluminium bar on the foot .
3. Lock the cross bar on the 2 m bar .

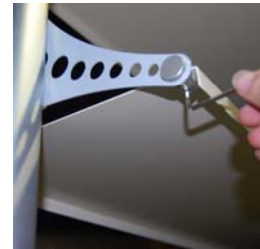

4. Fix the CF7 on the 2 m bar .
- 5-6 . Put the shelving on the CF7 .